Installation Instructions for the

ISSUE 2

PK 88781

SS41 Series Low Gauss Bipolar Hall Effect Position Sensors

ELECTRICAL CHARACTERISTICS

Catalog Listing SS41/SS41D	Min.	Тур.	Max.	Remarks
Supply Voltage	4.5		24	VDC
Supply Current		4 mA 6 mA	8.7 mA 15 mA	Vs = 4.5 VDC Vs = 6 to 24 VDC
Output Voltage (Operated)		0.15 V 0.15 V	0.40 V 0.45 V	-40 to +125°C +125 to +150°C
Output Current (Operated)			10 mA	
Output Leakage Current (Released)			10 μΑ	Leakage into sensor output
Output Switching Time				
Rise		0.2 μs	1.5 μs	10 to 90%
Fall		0.5 μs	1.0 μs	90 to 10%

MAGNETIC CHARACTERISTICS

Temperature		Gauss	
Range	Max. Op.	Min. Rel.	Min. Dif.
0 to 85°C	150	-150	50
-40 to 125°C	200	-200	40
-55 to 150°C	250	-250	30
25°C Typical	40	-40	80

SOLDERING/ASSEMBLY INSTRUCTIONS

Leads must be adequately supported during any forming or shearing operation to ensure that the leads are not stressed inside the plastic case. Recommended PC board wave soldering temperature is 250 to 260°C (482 to 500°F), with a duration of 3 seconds maximum.

CATALOG LISTING

Catalog Listing	Output	Magnetic Type
SS41	Digital current sinking Reverse polarity protection is standard	Bipolar

A WARNING

These products are **NOT** suitable for protection against personal injury.

To **AVOID** personal injury or death, **DO NOT USE** these products as emergency stop or safety devices, or in any other application where human safety is at risk.


ABSOLUTE MAXIMUM RATINGS

Supply Voltage (Vs)	-24 to +28 VDC
Voltage externally applied to output	+28 VDC max, OFF condition only -0.5 V min., OFF or ON condition
Output Current	20 mA
Temperature Range	-55 to +170°C (-67 to +338°F)
Magnetic Flux	No limit. Circuit cannot be damaged by magnetic overdrive


NOTICE

Absolute maximum ratings are the extreme limits that the device will withstand without damage to the device. However, the electrical and mechanical characteristics are not guaranteed as the maximum limits (above recommended operating conditions) are approached, nor will the device necessarily operate at absolute maximum ratings.

MOUNTING DIMENSIONS (for reference only)

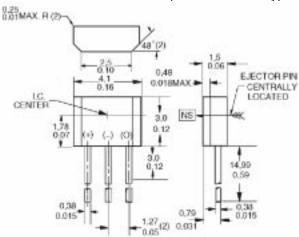

INTERFACING DIAGRAMS

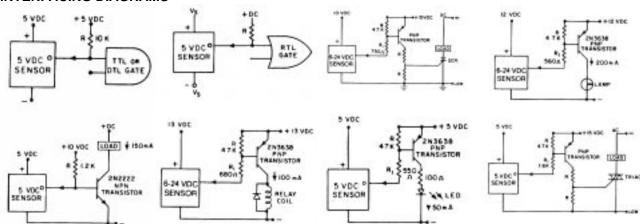

WARRANTY/REMEDY

Honeywell warrants goods of its manufacture as being free of defective materials and faulty workmanship. Contact your local sales office for warranty information. If warranted goods are returned to Honeywell during the period of coverage, Honeywell will repair or replace without charge those items it finds defective. The foregoing is Buyer's sole remedy and is in lieu of all other warranties, expressed or implied, including those of merchantability and fitness for a particular purpose.

For application assistance, current specifications, pricing or name of the nearest Authorized Distributor, contact a nearby sales office. Or call:

1-800-537-6945 USA

1-800-737-3360 Canada

1-815-235-6847 International

FAX

1-815-235-6545 USA

INTERNET

http://www.sensing.honeywell.com info@micro.honeywell.com

Specifications may change without notice. The information we supply is believed to be accurate and reliable as of this printing. However, we assume no responsibility for its use.

While we provide application assistance, personally and through our literature, it is up to the customer to determine the suitability of the product in the application.

Honeywell

MICRO SWITCH Honeywell Inc. 11 West Spring Street Freeport, Illinois 61032

